 
 

TomTom Toyota

 
1. What's in the box

1 Your TomTom

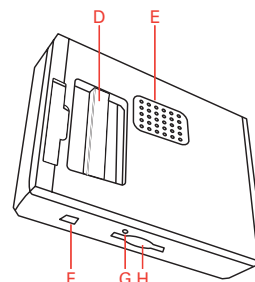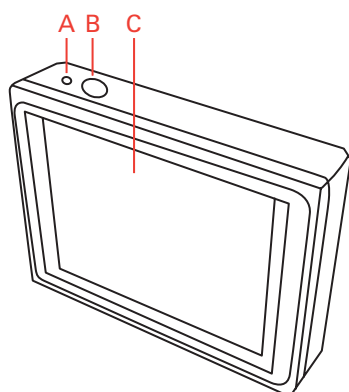

- Ⓐ Charging light
- Ⓑ On/off button
- Ⓒ Touchscreen
- Ⓓ Connector
- Ⓔ Speaker
- Ⓕ USB connector
- Ⓖ Reset button
- Ⓗ Memory card slot

2 Memory card (SD card)




3 USB cable



4 Connector cover



 
5 Sleeve



6 Documentation pack



 7 Product code card



2. Before you start...

Everyone loves TomTom

So never leave your TomTom in your car when you're not using it - it's an easy target for thieves.

Always remove your TomTom from the car stereo and take it with. If you are using your TomTom in another car, don't leave it or any other TomTom products on display.

Always store your TomTom in the bag to protect the screen.

Backup your TomTom

It's always a good idea to make a backup of the contents of your TomTom. You can make a backup using TomTom HOME.

For more information about TomTom HOME, see **Using TomTom HOME** on page 55.

Safety lock

When you first switch on your TomTom, the safety lock is enabled. You can switch off the safety lock in the by tapping **Safety preferences** in the Preferences menu. We recommend using the safety lock at all times.



Safety preferences

When the safety lock is enabled, only a few buttons and features are available while you are driving. When you are stationary, all the buttons and features are available.

For more information, see **Safety preferences** on page 39.

Keep to the speed limit

To help you keep to the speed limit, your TomTom can tell you the speed limit for the road you are on. To see the speed limit, select to show your speed in the **Status bar preferences** in the Preferences menu. The speed limit is shown next to your current speed.

Note: The speed limit information is included with the map and is not available for all roads.

 
Troubleshooting

Always make sure that you are using the latest version of the TomTom application on your TomTom. You can update the application using TomTom

HOME. For more information about TomTom HOME, see **Using TomTom HOME** on page 55.

If you have problems turning on your TomTom, try resetting your TomTom.

To reset your TomTom, use a straightened paper clip, or something similar, to push the reset button. The reset button is next to the memory card slot, on the bottom of your TomTom. Then turn your TomTom on.

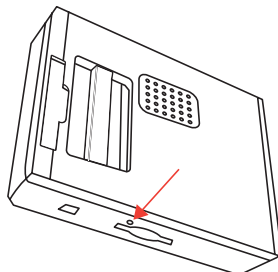

Secure your TomTom

Set a password for your TomTom so that only you can use it. Every time you start your TomTom you will have to enter your password.

To set the password, you have to run your TomTom using TomTom HOME. You can then use TomTom HOME to set the password. To set a password on your device, do the following:

1. Connect your TomTom to your computer and switch it on.
2. Start TomTom HOME if it does not start automatically.

If you do not have TomTom HOME installed, insert the CD that came with your TomTom to install it.

Alternatively, you can download TomTom HOME from www.tomtom.com. Make sure you always have the latest version of TomTom HOME. For more information about TomTom HOME, see **Using TomTom HOME** on page 55.

3. In the Planning section, select your TomTom.

A picture of your TomTom is shown in the main section of TomTom HOME.

4. Click the On/Off button on the picture of your TomTom to switch it on in TomTom HOME.

Your TomTom starts in TomTom HOME. You can now set the password on your TomTom using TomTom HOME. Don't unplug your TomTom, just use it as you normally would by clicking the buttons shown on your computer.

5. From the Main Menu in your device, click **Change preferences**.
6. Click **Set owner**. You may have to click the arrow until you reach the page where **Set owner** is shown.



Set owner

If you cannot find the button **Set owner**, make sure that all buttons are shown in your TomTom. Tap the button **Show ALL menu options**. All buttons will now be shown.

You can now set the password for your TomTom. You can also set your name and address, which will then be shown when your TomTom starts up.

Take care of your TomTom

It is important to take care of your TomTom and to clean it correctly.

- Use a soft cloth to wipe the screen of your TomTom; do not use any liquid cleaners.
- If your TomTom gets wet, dry it with a soft cloth.
- Do not open the casing of your TomTom under any circumstances. Doing so may be dangerous and will invalidate your warranty.
- Do not use the memory card (SD card) with any device other than a TomTom device. Other devices may damage the memory card.
- Do not expose your TomTom to high or low temperatures, which can cause permanent damage. For example, don't leave it in the car on hot summer days or during cold winter nights.

3. Getting started

Switching on

Follow the instructions at the start of this manual to dock your TomTom in your car stereo. Your TomTom can also be used without docking it in your car stereo. A mount is available as an accessory so that you can use your TomTom in other cars.

The first time you switch on your TomTom, it may take up to 20 seconds to start. To switch off your TomTom, press and hold the On/Off button for 2 seconds.

Setting up

You have to answer a few questions to set up your TomTom. Answer the questions by tapping the screen. You will use the touchscreen for everything you do with your TomTom.

You can change these settings at any time using the Preferences menu. For information about the Preferences menu, see **Preferences** on page 38.

Once you have answered the questions, your TomTom will display the Driving View. The Driving View is shown in black and white until your TomTom locates your current position.

For more information about the Driving View, see **Driving View** on page 14.

Locating your current position

Your TomTom must be outdoors to locate your current position. The first time you start your TomTom, it can take up to 5 minutes to find your current position. If it takes longer than 5 minutes, make sure that you are in an open place without tall buildings or trees around you.

In the future, your position will be found much faster, normally within a few seconds.

Once your TomTom has located your current position, the Driving View is shown in full colour and shows your position on the map.

Night view

When you switch on the headlights in your car, your TomTom will switch to night view. In night view, the brightness of the screen on your TomTom is dimmed so it's easier to see when it's dark outside.

Night view on your TomTom is linked to the dimmer setting on your car stereo. See the manual for your car stereo for information about the dimmer setting.

To manually control the brightness of the screen, select not to link the night view to the dimmer setting in the **Docking preferences** in the Preferences menu. To switch to night view manually, tap **Use night colours** in the Preferences menu.

4. Making your first journey

Planning a route with TomTom is very simple. To plan your first route, follow the steps below.

Note: You should always plan your journeys before you start driving. It is dangerous to plan routes when you are already moving.

1. Tap the screen to bring up the Main Menu.
2. Tap **Navigate to...**



For your first journey, we will navigate to an address.

3. Tap **Address**.



When you enter an address, you can choose from four options:

- **City centre** - tap this button to set your destination as the centre of a city or town.
- **Street and house number** - tap this button to set an exact address as your destination.
- **Postcode** - tap this button to enter a postcode as your destination.

Note: You can enter a postcode for any country. In the UK and the Netherlands, postcodes are detailed enough to identify a house on their own. In other countries you can enter a postcode to identify a town or area. You will then have to enter a street and house number.

- **Crossing or intersection** - tap this button to set your destination as the point where two streets meet.



For your first journey, we will enter an exact address.

4. Tap **Street and house number**.
5. Start to type the name of the town where you want to go.

 


As you type, the names of the towns that match what you have typed are shown. When your destination is shown in the list, tap the name of the town to set the destination.

6. Start to type the name of the street.

As with the name of the town, the names of the streets that match what you have typed are shown. When your destination is shown in the list, tap the name of the street to set the destination.

7. Now enter the house number of your destination and then tap **Done**.

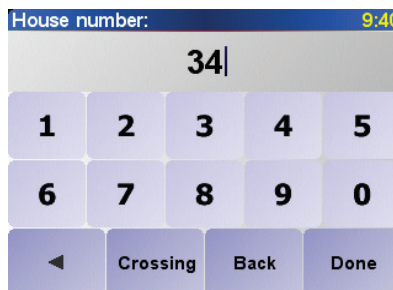


8. Your TomTom asks you whether you need to arrive at a particular time.



Tap **YES** to enter an arrival time. Your TomTom shows you whether you will arrive on time. For more information, see **Arrival times** on page 10.

The route is then calculated by your TomTom.

 9. When the route has been calculated, tap **Done**.

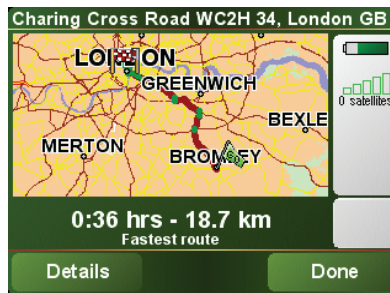

TomTom will immediately start guiding you to your destination with spoken instructions and visual instructions on the screen.

Arrival times

When you plan a route, your TomTom asks you if you need to arrive by a particular time:






Tap **YES** to enter an arrival time.

Your TomTom calculates your arrival time and shows you whether you will arrive on time.

You can also use this information to work out when you need to leave. If your TomTom shows you that you will arrive 30 minutes early, you can wait and leave in 30 minutes time, rather than arrive early.

Your arrival time is constantly recalculated during your journey. The status bar shows whether you will arrive on time or late, as shown below:

	<p>You will arrive 55 minutes before the arrival time you entered.</p> <p>If the estimated arrival time is more than five minutes before the time you entered, it is shown in green.</p>
	<p>You will arrive 3 minutes before the arrival time you entered.</p> <p>If the estimated arrival time is less than 5 minutes before the time you entered, it is shown in yellow.</p>
	<p>You will arrive 19 minutes late.</p> <p>If the estimated arrival time is later than the time you entered, it is shown in red.</p>

What are the other navigation options?

When you tap **Navigate to...**, you can set your destination in many ways, not just by entering the address. The other options are listed below:



Home

Tap this button to navigate to your Home location.

You will probably use this button more than any other.

For information about setting your Home location, see **Change Home location** on page 40.



Favourite

Tap this button to select a Favourite as your destination.

For more information about Favourites, see **Favourites** on page 23.



Recent destination

Tap this button to select your destination from a list of places you have recently used as destinations.



Point of Interest

Tap this button to navigate to a Point of Interest (POI).

For more information about POIs and navigating to a POI, see **Points of Interest** on page 27.



Point on map

Tap this button to select a point on the map as your destination using the map browser.

For more information about the map browser, see **Using the map** on page 21.



Latitude Longitude

Tap this button to enter a destination with latitude and longitude values.



TomTom Buddy

Tap this button to navigate to the current position of a TomTom Buddy. Don't forget that the Buddy may move before you reach him.

For more information about TomTom Buddies, see **TomTom PLUS** on page 53.



Last docked

Tap this button to navigate to the location where your TomTom was last docked in the windscreen dock in your car.

This option helps you to find your car if you have problems remembering where you parked it.

To get back to your car, use your TomTom while you are walking. Tap **Navigate to...** then **Last docked**. Your TomTom will navigate you to the location of your parked car.

What happens if I parked in an underground car park?

If your TomTom loses GPS reception for the last part of the journey, for example, if you park in an underground car park, the last-known position will be used. In this case, it would probably be the entrance to the car park.

Planning in advance

You can also use your TomTom to plan journeys in advance by selecting both your starting point and your destination. You could, for example, do the following:

 
- Find out how long a journey is going to take before you start.
- Check the route of a journey you are planning.
- Check a route for someone who is coming to you and explain the route to them.

To plan a route in advance, follow these steps:

1. Tap the screen to bring up the main menu.
2. Tap **Advanced planning**.



3. Select the starting point for your journey in the same way as you would normally select your destination.
4. Set the destination for your journey.
5. Choose the type of route that should be planned.

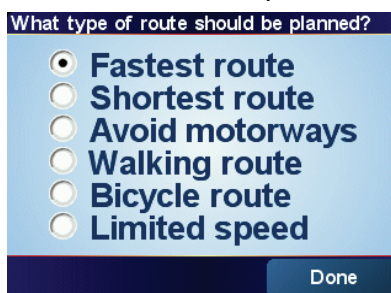

- **Fastest route** - the route which takes the least time.
 - **Shortest route** - the shortest distance between the locations you set. This may not be the quickest route, especially if the shortest route is through a town or city.
 - **Avoid motorways** - a route which avoids motorways.
 - **Walking route** - a route designed for making the journey on foot.
 - **Bicycle route** - a route designed for making the journey on a bicycle.
 - **Limited speed** - a route for a vehicle which can only drive at a limited speed. You have to specify the maximum speed.
6. Your TomTom plans the route between the two locations you selected.

More information about a route

To find out about your route in detail, tap the **Details** button on the route summary screen.

You can then select from the following options:



**Browse as
text**

Tap this button for a list of all the turn instructions on the route.

This is particularly useful if you need to explain a route to someone else.



**Browse as
images**

Tap this button to see each turn in the journey. Tap the right and left arrows to move forwards and backwards through the journey.

Tap the screen to turn off the 3D display and view the map from above.



**Browse map
of route**

Tap this button to see an overview of the route using the map browser.

For more information about the map browser, see **Using the map** on page 21.



**Show route
demo**

Tap this button to watch a demo of the journey. You can interrupt the demo at any time by tapping the screen.

 


**Show route
summary**

Tap this button to open the route summary screen.

You can access these options for the route you last planned by tapping **View route** in the Main Menu.

5. Driving View

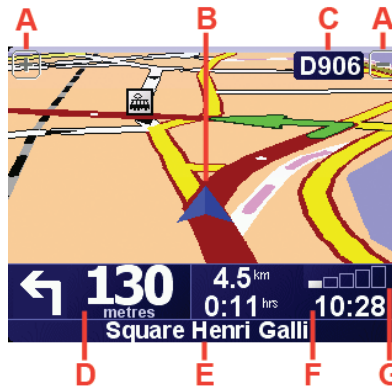

- Ⓐ Buttons to zoom in and zoom out on your position.
- Ⓑ Your current position.
- Ⓒ The name of the next major road or road sign information, if applicable.
- Ⓓ The next instruction.

This area shows you what to do and when you will have to do it.

Tap this area to repeat the last spoken instruction and to change the volume.

- Ⓔ The name of the next street to turn onto.
- Ⓕ Information about your journey.

Normally this area shows the remaining journey time, remaining distance, and arrival time. To set which information is displayed, tap **Status bar preferences** in the **Preferences** menu.

 
- Ⓖ Indicator of the strength of the GPS signal.

For more information about GPS, see **How does navigation work?** on page 57.

6. Menus

Main menu

If your car is stationary, the full menu is available. If your car is moving and the safety lock is enabled, then only a few buttons are available.

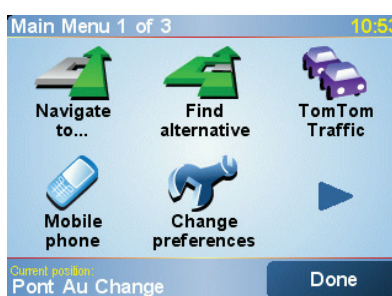

- **Navigate to...**

Tap this button to start planning a route.

- **Find alternative...**

Tap this button if you want to avoid part of your route, travel via a specific location or calculate an alternative route.

- **TomTom Traffic**

Tap this button to enable or disable traffic information.

- **Mobile phone**

This button opens the mobile phone menu. You can, for example, make calls, and write or read messages. For more information, see **Hands-free calling** on page 35.

- **Change preferences**

This button opens the Preferences menu. You can change many things about the way TomTom looks and behaves. For more information, see **Preferences** on page 38.

Hidden buttons and features

When you first start using your TomTom, not all the buttons will be shown in the menu.

Many buttons and some more advanced features are hidden because you will not need these features very often.

To show all buttons and features, tap **Show ALL menu options** in the Preferences menu.

To hide these buttons again, tap **Show fewer menu options** in the Preferences menu.

Safety lock

If your car is moving and the safety lock is enabled, you are not able to access all buttons and features of your TomTom.

The Main Menu shows only a few buttons that may be needed while you are driving.

As soon as your car stops moving, you will be able to access all of the buttons and features again.

To disable the safety lock, tap **Safety preferences** in the Preferences menu.

7. Using the car stereo

Switching to audio

To use your TomTom to control your car stereo, press the **Screen** button. You can switch back to the navigation functions at any time by pressing the **Screen** button again.

When you switch to controlling your car stereo, it switches to the radio unless you are already using a different audio source. To switch to other audio input sources, press the **Source** button.

The volume of all sound is set by the volume control on the car stereo. You can adjust the volume of spoken instructions separately by changing the volume on your TomTom.

Using the radio

Your TomTom shows the radio station that you are tuned to and the frequency.



You can save the a station so that it is a preset. There are 6 presets per frequency. To save a frequency, press and hold the number that you want to use to save the frequency. When the colour of the button changes to black, the frequency is saved.

To select a preset station, tap the preset that you want to listen to.

 
Using an iPod® and USB storage devices

You can use your TomTom to play songs saved on an iPod® or USB storage device connected to your car stereo. The cable for connecting an iPod to your car stereo is available as an accessory.

Note: Your TomTom must be docked in the car stereo to play back music stored on an iPod® or USB storage device

When you first connect an iPod® or USB storage device and select one of these as the audio input source, your car stereo starts to play the first song on the iPod® or USB storage device.

To select your iPod® or USB storage device, press the **Source** button on your car stereo until **iPod** or **USB** is shown on your TomTom. To select the song to play, tap **Select**. Using the TomTom Jukebox, you can then choose the songs you want to listen to.

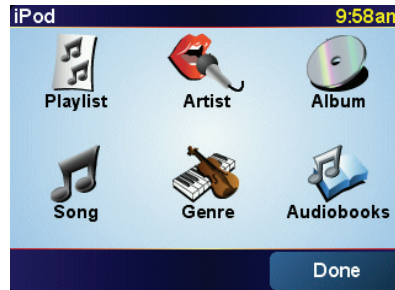

- **Playlist** - tap this button to select a playlist.

Note: You can create playlists in a third-party application like iTunes®, Musicmatch® or Winamp®.

- **Song** - tap this button to select from all the songs.
- **Artist** - tap this button to select a song by a particular singer or group.
- **Genre** - tap this button to select a particular type of music.
- **Album** - tap this button to select from a list of all the albums.
- **Audiobooks** - tap this button to select an Audiobook. Audiobooks cannot be played from USB storage devices.

To skip to the next or previous song, use the controls on the car stereo.

Note: Not all mp3 files contain information about the song, such as the artist or genre. If the file contains no information, the file name is used as the song title.

8. Finding alternative routes

Once you have planned a route, you may want to change something about the route, without changing your destination.

Why change the route?

Maybe for one of these reasons:

- You can see a roadblock or a line of traffic ahead.
- You want to travel via a particular location, to pick someone up, stop for lunch or fill up with petrol.
- You want to avoid a difficult junction or a road you don't like.



Find alternative...

Tap **Find alternative...** in the Main Menu to change the route that is currently planned.

Then tap one of the options below.



Calculate alternative

Tap this button to calculate an alternative to the route already planned.

Your TomTom will look for another route from your current location to your destination.

If you decide you would prefer to use the original route after all, tap **Recalculate original**.

Why would I need to do this?

Apart from the roads near your position and near your destination, the new route will use totally different roads to reach your destination. This is an easy way of calculating a totally different route.



Avoid roadblock

Tap this button if you can see a roadblock or a line of traffic ahead. You then have to choose how much of the route ahead you want to avoid.

Choose from the different options: 100m, 500m, 2000m, 5000m. Your TomTom will recalculate your route avoiding the section of the route for the distance you selected.

Don't forget that once a new route is calculated, you may have to turn off the road you are on very soon.

If the roadblock suddenly clears, tap **Recalculate original** to return to your original route.



Travel via...

Tap this button to change your route so that it passes a particular location, perhaps to pick someone up on the way.

You choose the location you want to pass in the same way as you choose a destination. So you can select from all the same options: for example, **Address, Favourite, Point of Interest** and **Point on map**.

Your TomTom will calculate a new route to your destination that passes the location you chose.

Using this button, you can only travel via one location. If you want to pass more than one, use an Itinerary. For more information, see **Itinerary planning** on page 32.



Recalculate original

Tap this button to return to the original route without any deviations for roadblocks or to travel via particular locations.



Avoid part of route

Tap this button to avoid a part of the route. Use this button if you see that your route includes a road or junction you don't like, or which is well-known for traffic problems.

You then choose the road you want to avoid from a list of the roads on your route.



Minimise traffic delays

 
Tap this button to recalculate your route so that it avoids traffic problems as much as possible. Your TomTom will check if there are any traffic problems on your route and work out the best route to avoid the problems.

For more information about using TomTom Traffic, see **Traffic information** on page 50.

9. Using the map

Every time you use your TomTom to plan a route, you are using the map. However, you can use the map in many other ways.

To open the map, tap **Browse map** in the **Main Menu**.

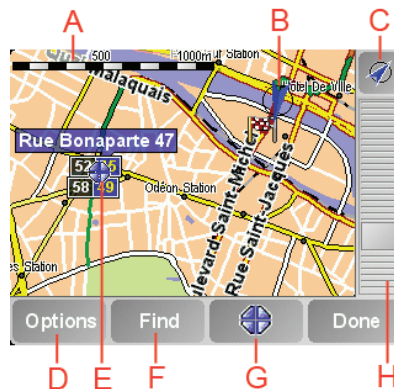

Place your finger on the screen and drag it across the screen to move the map.

Ⓐ The scale bar

Move the handle on the scale bar to zoom in and out on the cursor position.

Ⓑ Your current position

Ⓒ GPS button.

Tap this button to centre the map on your current position.

Ⓓ The Options button

Use the Options button to set what is shown on the map.

Ⓔ The cursor

Ⓕ The Find button

Tap this button to find specific addresses and Points of Interest on the map.

Ⓖ The Cursor button

Tap this button to navigate to the cursor position, make a Favourite of the cursor position, or find a Point of Interest near the cursor position. See below for more information.

Ⓗ The zoom bar.

Change the scale of the map by moving the zoom bar up or down.

Using the Cursor button

You can use the map to find addresses and Points of Interest (POIs), for example, restaurants, train stations and petrol stations.

With the Cursor button, you can use what you have found. Tap the cursor button to open the page of buttons shown below:



Navigate there

Tap this button to navigate to the cursor position. Your TomTom will calculate the route there.



Find POI nearby

Tap this button to find a POI near the cursor position. For example, if you have found a restaurant to go to, you can search for a parking garage nearby.



Call

Tap this button to call the cursor position. This button is only available if your TomTom has the phone number for the cursor position.

The phone numbers of many POIs are stored in your TomTom. If you entered phone numbers for POIs you have created, you can also call them.

For more information about hands-free calling, see **Hands-free calling** on page 35.



Add as Favourite

Tap this button to create a Favourite at the cursor position.

For more information about Favourites, see **Favourites** on page 23.



Add as POI

Tap this button to create a POI at the cursor position.

For more information about POIs, see **Points of Interest** on page 27.



Travel via...

Tap this button to travel via the cursor position. This button is only available if you are currently navigating to a destination.

10. Favourites

What are Favourites?

Favourites are places that you go often. You can create Favourites so that you don't have to enter the address every time you want to navigate there.

They don't have to be places you like, just useful addresses.

How can I create a Favourite?

From the Main Menu, tap **Add Favourite**.

Note: The button **Add Favourite** may not be shown on the first page of the Main Menu. Tap the arrow to open other pages in the Main Menu.

You can then select the location of the Favourite from the list below.

Give your Favourite a name that is easy to remember. Your TomTom will always suggest a name, usually the address of the Favourite. To enter the name, just start typing. You don't have to delete the suggested name.



Home

You can set your Home location as a Favourite.



Favourite

You cannot create a Favourite from another Favourite. This option will always be unavailable in this menu.

To rename a Favourite, tap **Manage Favourites** in the Preferences menu.

For more information, see **Manage Favourites** on page 40.



Address

You can specify an address to be a Favourite. When you enter an address, you can choose from four options. The same options as appear in the **Navigate to...** menu:

- **City centre**
 - **Street and house number**
 - **Postcode** (fully supported only in UK and the Netherlands)
 - **Crossing or intersection**
-



Select a Favourite location from a list of places you have recently used as destinations.



You can add a Point of Interest (POI) as a Favourite.

Does it make sense to do this?

If you visit a POI you particularly like, for example a restaurant, you can add it as a Favourite.

To add a POI as a Favourite, tap this button, then do the following:

1. Narrow your choice of POIs by selecting the area where the POI is.



You can select one of these options:

- **POI near you** - to search from a list of POIs near your current position.
- **POI in city** - to choose a POI in a particular town or city. You have to specify a town or city.
- **POI near Home** - to search from a list of POIs near your Home location.

If you are currently navigating to a destination, you can also select from a list of POIs which are on your route or near your destination. Choose one of these options:

- **POI along route**
- **POI near destination**

2. Select the category of POI.

Tap the category of POI if it is shown or tap the arrow to choose from the complete list.





Tap **Any POI category** to search for a POI by name.

For more information about POIs, see **Points of Interest** on page 27.



Tap this button to add your current position as a Favourite.

For example, if you see stop somewhere you like, while you are there you can tap this button to create the Favourite.

 Point on map	<p>Tap this button to create a Favourite using the map browser.</p> <p>Select the location of the Favourite using the cursor, then tap Done.</p> <p>For more information about the map browser, see Using the map on page 21.</p>
 Latitude Longitude	<p>Tap this button to create a Favourite by entering latitude and longitude values.</p>
 TomTom Buddy	<p>Tap this button to make a Favourite of the current position of a TomTom Buddy.</p> <p>For more information about TomTom Buddies, see TomTom PLUS on page 53.</p>
 Last docked	<p>Tap this button to save the location where your TomTom was last docked in the windscreen dock in your car.</p> <p>If your TomTom loses GPS reception for the last part of the journey, for example, if you park in an underground car park, the last-known position will be used. In this case, it would probably be the entrance to the car park.</p>

How can I use a Favourite?

You will normally use a Favourite as a way of navigating to a place without having to enter the address. To navigate to a Favourite, do the following:

1. Tap the screen to bring up the Main Menu.
2. Tap **Navigate to...**
3. Tap **Favourite**.
4. Select a Favourite from the list.

Your TomTom calculates the route for you.

5. When the route is calculated, tap **Done**.

Your TomTom will immediately start guiding you to your destination with spoken instructions and visual instructions on the screen.

How many Favourites can I create?

You can create up to 48 Favourites. If you want to add more than 48, we suggest that you make some POI categories and add some of your Favourites as POIs.

For more information about POIs, see **Points of Interest** on page 27.

How can I delete a Favourite?

1. Tap the screen to bring up the Main Menu.
2. Tap **Change preferences** to open the Preferences menu.
3. Tap **Manage Favourites**.

Tip: Tap the arrow to move to the next page buttons.

4. Tap the Favourite you want to delete.
5. Tap **Delete**.

How can I change the name of a Favourite?

1. Tap the screen to bring up the Main Menu.
2. Tap **Change preferences** to open the Preferences menu.
3. Tap **Manage Favourites**.

Tip: Tap the arrow to move to the next page buttons.

4. Tap the Favourite you want to rename.
5. Tap **Rename**.

11. Points of Interest

Points of Interest or POIs are useful places on the map. Here are some examples:

- Restaurants
- Hotels
- Museums
- Parking garages
- Petrol stations

 
Showing POIs on the map

1. Tap **Enable/disable POIs** in the Preferences menu.



2. Select the POI categories to display on the map.

Tap **Find** to search for a POI by name.

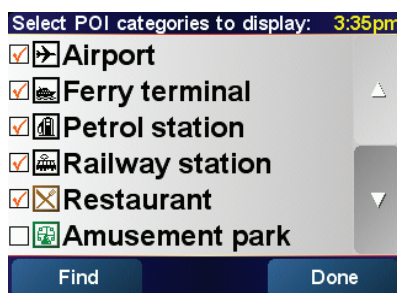

3. Tap **Done**.

The POIs you selected are shown on the map as symbols.

Calling a POI

Your TomTom knows the phone numbers for many POIs. You can, for example, call a restaurant to book a table or a cinema to book tickets.

For information about using your TomTom for hands-free calling, see **Hands-free calling** on page 35.

Navigating to a POI

1. Tap the screen to bring up the Main Menu.
2. Tap **Navigate to...** in the Main Menu.
3. Tap **Point of Interest**.
4. Narrow your choice of POIs by selecting the area where the POI is.



You can select one of these options:

- **POI near you** - to search from a list of POIs near your current position.
- **POI in city** - to choose a POI in a particular town or city. You have to specify a town or city.
- **POI near Home** - to search from a list of POIs near your Home location.

If you are currently navigating to a destination, you can also select from a list of POIs which are on your route or near your destination. Choose one of these options:

- **POI along route**
- **POI near destination**

5. Select the category of POI:

Tap **Any POI category** to search for a POI by name.

Tap the category of POI if it is shown.

Tap the arrow to choose from the complete list of categories. Select the category from the list or start to type the name of the category and select it when it is shown in the list.

6. From the list of POIs shown, select the POI you want to navigate to.

The table below explains the distances listed next to each POI.

POI near you	Distance from your current location
POI in city	Distance from the city centre
POI near Home	Distance from your Home location
POI along route	Distance from your current location
POI near destination	Distance from your destination

If you know the name of the POI, tap **Find** and type the name. Select it from the list when it is shown.

Once you have selected a POI, the route to the POI is calculated by your TomTom.

Managing POIs



Manage POIs

Tap **Manage POIs** from the Preferences menu.

Note: The **Manage POIs** button is only available when all menu buttons are shown. To show all menu buttons, tap **Show ALL menu options** in the Preferences menu.

You can, for example, do the following:

- Create your own POI categories and add POIs to them.
- Set warnings when you get close to POIs.

Why would I want to create my own POIs?

A POI acts like a shortcut - once you have saved a location as a POI you never have to type the address of that POI again. But when you create a POI you can save more than just the location.

- Phone number - when you create a POI, you can save a phone number with it.
- Categories - when you create a POI you have to put it in a category.

For example, you could create a category of POIs called 'Favourite restaurants'. With each POI, save their phone number so that you can call them from your TomTom to reserve a table.

How can I create my own POIs?

1. Tap the screen to bring up the Main Menu.
2. Tap **Change preferences**.
3. Tap **Manage POIs**.
4. Before you can add a POI, you have to create at least one POI category. Every POI is assigned to a POI category. You can only add POIs to POI categories you have created yourself.



Add POI category

Tap **Add POI category**.










5. Enter a name for your POI category, for example, 'Friends' or 'Favourite restaurants'. Then select a marker for your POI category.
6. Tap **Add POI**.



Add POI

7. Select the POI category you want to add the POI to.

8. Select the location of your POI from the list below.

 Home	<p>You can set your Home location as a POI.</p> <p>If you want to change your Home location, you can create a POI of the Home location before you change it.</p>
 Favourite	<p>You can create a POI from a Favourite.</p> <p>You can only create a limited number of Favourites. If you want to create more Favourites you have to delete some Favourites first. Before you delete a Favourite, make it into a POI so that you don't lose the address.</p>
 Address	<p>You can specify an address to be a POI. When you enter an address, you can choose from four options. The same options as appear in the Navigate to... menu:</p> <ul style="list-style-type: none">• City centre• Street and house number• Postcode (fully supported only in UK and the Netherlands)• Crossing or intersection
 Recent destination	<p>Select a POI location from a list of places you have recently used as destinations.</p>
 Point of Interest	<p>You can add a Point of Interest (POI) as a POI. For example, if you are creating a category of POIs for your favourite restaurants, use this option instead of entering the addresses of the restaurants.</p>
 GPS position	<p>Tap this button to add your current position as a POI.</p> <p>For example, if you stop somewhere you like, while you are there you can tap this button to create the POI.</p>
 Point on map	<p>Tap this button to create a POI using the map browser.</p> <p>Select the location of the POI using the cursor, then tap Done.</p> <p>For more information about the map browser, see Using the map on page 21.</p>
 Latitude Longitude	<p>Tap this button to create a POI by entering latitude and longitude values.</p>
 TomTom Buddy	<p>Tap this button to make a POI of the current position of a TomTom Buddy.</p> <p>For more information about TomTom Buddies, see TomTom PLUS on page 53.</p>



Last docked

Tap this button to save the location where your TomTom was last docked in the windscreen dock in your car.

If your TomTom loses GPS reception for the last part of the journey, for example, if you park in an underground car park, the last-known position will be used. In this case, it would probably be the entrance to the car park.

How can I set warnings for POIs?

1. Tap the screen to bring up the main menu.
2. Tap **Change preferences**.
3. Tap **Manage POIs**.

Note: The **Manage POIs** button is only available when all menu buttons are shown. To show all menu buttons, tap **Show ALL menu options** in the Preferences menu.

4. Tap **Warn when near POI**.



Warn when near POI

5. Select the category of POI you want to be warned about.

Select the category from the list or start to type the name of the category and select it when it is shown in the list.

6. Set how close the POI should be when you receive a warning.

Warn when closer than: 3:11pm

70 yards

1	2	3	4	5
6	7	8	9	0
◀	Cancel	Done		

7. Choose the warning sound for the category of POI you selected.

12. Itinerary planning

What is an Itinerary?

An Itinerary is a plan for a journey with more stops than just your final destination.

An Itinerary is made up of the following items:

- Destinations - the end of a particular journey, the place where you want to stop.
- Waypoints - points on your journey that you want to pass.

Here's an example of an Itinerary:



Destinations are shown with this symbol.



Waypoints are shown with this symbol.

When would I use an Itinerary?

You could use an Itinerary for these kinds of trips:

- A driving holiday through a country with lots of stops.
- A two day car journey with an overnight stop.
- A short drive which passes particular Points of Interest.

In all these examples you could tap **Navigate to...** for each place. However, if you use an Itinerary, you can save time by programming everything in advance.

Creating an Itinerary

1. Tap the screen to bring up the Main Menu.
2. Tap **Itinerary planning**.



Itinerary
planning

The Itinerary planning screen opens. At first, there are no items on the Itinerary.

Note: This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.

3. Tap **Add** and select a location.

Tip

You can add items to your Itinerary in any order and organise them into the Itinerary later.

Following an Itinerary

When you use an Itinerary to navigate, the route will be calculated to the first destination on the Itinerary. Your TomTom calculates the remaining distance and time to the first destination and not for the whole Itinerary.

As soon as you start to use an Itinerary, the route is calculated from your current position. You do not need to set a departure point.

When you have passed a waypoint or reached a destination, it is marked as visited.

Waypoints are shown on the map but your TomTom will not warn you when you are approaching a waypoint, or tell you when you reach the waypoint.

Organising an Itinerary

Tap an item on your Itinerary to open a page of buttons for editing the item. The buttons shown below are available.



Mark as
waypoint

You can change a waypoint into a destination using this button.

Remember that waypoints are points on your journey to your destination that you want to pass and destinations are places where you want to stop.

This button is only shown if the item you tapped is a destination.



Mark as
destination

You can change a waypoint into a destination using this button.

Remember that destinations are places where you want to stop, and waypoints are points on your journey to your destination that you want to pass.

This button is only shown if the item you tapped is a waypoint.




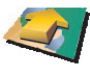



Mark 'visited'

Tap this button to miss out part of your Itinerary. Your TomTom will ignore this item and all the items before it in the Itinerary.

It will navigate you to the next item in the Itinerary.

This button is only shown if you are still due to visit this item.

 Mark 'to visit'	<p>Tap this button to repeat part of your Itinerary. Your TomTom will navigate you to this item followed by the rest of the items in the Itinerary.</p> <p>This button is only shown if you have already visited this item.</p>
 Move item up	<p>Tap this button to move the item up the Itinerary.</p> <p>This button is unavailable if the item is at the top of the Itinerary.</p>
 Move item down	<p>Tap this button to move the item down the Itinerary.</p> <p>This button is unavailable if the item is at the bottom of the Itinerary.</p>
 Show on map	<p>Tap this button to see the location of the item on the map.</p> <p>For more information about the map browser, see Using the map on page 21.</p>
 Delete item	<p>Tap this button to delete the item from the Itinerary.</p>

Start using an Itinerary

Tap **Options**, then tap **Start navigation**.



Once you have created an Itinerary, it's a good idea to save it. To save an Itinerary, tap **Save Itinerary**.

To load a saved Itinerary, tap **Load Itinerary**.

To create a new Itinerary, tap **New Itinerary** and to delete one, tap **Delete Itinerary**.

13. Hands-free calling

 
If you have a mobile phone with Bluetooth®, you can use your TomTom to make phone calls and send and receive messages while you are driving. Your TomTom must be docked in your car stereo to make hands-free calls.

Note: *Not all phones are supported or compatible with all features. For more information, visit www.tomtom.com/phones*

Connecting to your phone

First you must establish a connection between your mobile phone and your TomTom. You only have to do this once. Your TomTom remembers your phone.

Tap **Mobile phone** in the **Main Menu**, then follow the instructions on the screen.

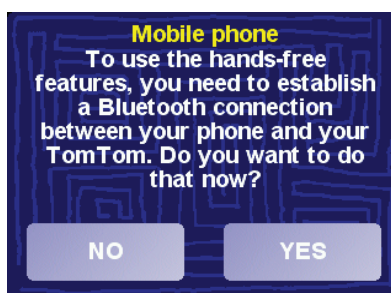

Setting up TomTom PLUS

After you have established a connection with your phone, you can set up a wireless data connection for TomTom PLUS services.

For information about TomTom PLUS, see **TomTom PLUS** on page 53.

Tips

- Make sure that you switch on Bluetooth® on your phone.
- Make sure that your phone is set to 'discoverable' or 'visible to all'.
- You may have to enter the password '0000' on your phone in order to connect to your TomTom.
- Make your TomTom a trusted device on your phone. Otherwise you have to enter '0000' every time.

See your phone's user guide for information about Bluetooth® settings.

Your phonebook

You can copy your phonebook from your mobile phone to your TomTom so that you can make calls with just a few taps on the screen.

This is the safest way to make hands-free calls.

Note: You can copy your phonebook to your TomTom at any time. From the Mobile phone menu, tap **Get numbers from phone**.

 
Not all phones can transfer their phonebook to your TomTom. For more information, visit www.tomtom.com/phones

Making a call

Once you have established a connection with your phone, you can start making calls.


Note: Your TomTom must be docked in your car stereo to make hands-free calls.

1. Tap **Mobile phone** in the Main Menu.
2. Tap **Call**.

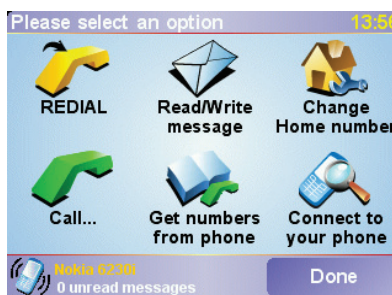

Note: Make sure that your phone is currently selected. The current phone is shown at the bottom of the screen.

 3. Do one of the following:

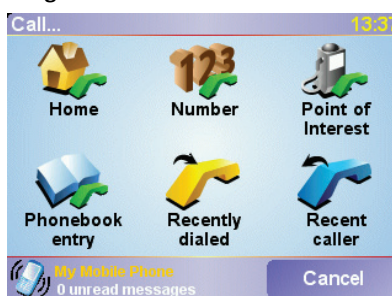

- Tap **Home** to call your Home location. If you have not entered a number for your Home location this button is unavailable. To enter a number, tap **Change Home number** in the **Phone preferences** menu.
- Tap **Number** to enter a number to call.
- Tap **Point of Interest** to choose a Point of Interest (POI) to call. If your TomTom knows the phone number of a POI, this is shown next to the POI:



- Tap **Phonebook entry** to select a contact from your phonebook.

Note: If you have not copied your phonebook to your TomTom, the button **Phonebook entry** is unavailable.

- Tap **Recently dialed** to select from a list of people or numbers you have called recently using your TomTom.
- Tap **Recent caller** to select from a list of people or numbers who called you recently. Only calls you have received on your TomTom are saved in this list.

For information about POIs, see **Points of Interest** on page 27.

Receiving a call

If someone calls you while you are driving, accept or reject the call by tapping the screen.

Auto-answer

You can tell your TomTom to answer every call automatically after a certain time. Tap **Phone preferences** in the mobile phone menu, then tap **Auto-answer preferences**.

Select when your TomTom will automatically answer your calls.

Sharing your TomTom

You can establish connections with up to 5 mobile phones. To add more phones, do the following

1. Tap **Mobile phone** in the Main Menu.
2. Tap **Connect to your phone**.
3. Tap **Find other phone...** and follow the instructions on the screen.

To switch between phones, tap **Connect to your phone** and then select your phone from the list.

14. Preferences

You can change many things about the way your TomTom looks and behaves. Tap **Change preferences** in the Main Menu.

Hidden buttons and features

When you first start using your TomTom, not all the buttons will be shown in the menu.

Many buttons and some more advanced features are hidden because you will not need these features very often.



**Show ALL
menu options**

To see all of the buttons and features, tap this button in the Preferences menu.



**Show fewer
menu options**

After you have finished, we recommend that you hide the advanced buttons and features again by tapping this button. For everyday use, you won't need all the buttons and features.

Use night colours / Use day colours



**Use Night
colours**

Tap this button to reduce the brightness the of the screen and use darker colours on the map.

By default, the colours that are used for the screen is linked to the dimmer setting on your car stereo. When the display on your car stereo is dimmed, night colours are used.

To manually control the brightness of the screen, select not to link the night view to the dimmer setting in the **Docking preferences** in the Preferences menu.



**Use day
colours**

When should I use this?

When it's dark outside, it's easier to see the screen of your TomTom if it isn't so bright.

To change back to a brighter screen and brighter colours on the map, tap the button **Use day colours**.

Turn off 3D display / Turn on 3D display



Turn off 3D display

Tap this button to view the map from above while you are navigating.



Turn on 3D display

To switch back to seeing the map from your perspective as you drive, tap **Turn on 3D display**.

When should I use this?

In some situations, it is easier to see the map from above. Perhaps if the roads are very complicated or if you are walking and using your TomTom to navigate.

Safety preferences



Safety preferences

Tap this button to enable or disable the safety lock.

Safety lock

When you enable the safety lock, you are not able to access all buttons and features of your TomTom while driving.

The Main Menu shows only a few buttons that may be needed while you are driving.

As soon as your car stops moving, you will be able to access all of the buttons and features again.

Enable/disable POIs



Enable/disable POIs

Tap this button to set which categories of Points of Interest (POIs) should be shown on the map.

Select the POIs that you want to see on the map from the list:

When you select a POI, it will be shown on the map by the symbol you can see next to each category in the list above.

To find a category of POI quickly, tap **Find**, then start to type the name of the POI category. As soon as the category is shown in the list, you can select it.

For more information about POIs, see **Points of Interest** on page 27.

Turn off sound / Turn on sound



Turn off sound

Tap this button to turn the spoken instructions off. The button changes to **Turn on sound**. If you turn the sound off, warnings for upcoming POIs are also turned off.

Volume preferences



Volume preferences

Tap this button to change the volume of the spoken instructions.

Manage Favourites



Manage Favourites

Tap this button to rename or delete Favourites.

To find a Favourite quickly, tap Find, then start to type the name of the Favourite. As soon as the Favourite is shown in the list, you can select it.

For more information about Favourites, see **Favourites** on page 23.

Change Home location



Change Home location

Tap this button to set or change your Home location.

Do I have to have my actual home as the Home location?

Your Home location can be a place you go often, for example, your office. It doesn't have to be your actual home.

Why should I set a Home location?

Once you have set your Home location, you can navigate there quickly whenever you need to get there. In the **Navigate to...** menu, just tap **Home**.

Change voice



Change voice

Tap this button to change the voice which gives you instructions.

Change language



Change language

Tap this button to change the language used for all the buttons and messages you see on your TomTom.

You can choose from a wide range of languages. When you change the language, you are also given the opportunity to change the voice.

Warn when near POI



Warn when near POI

Tap this button to be alerted when you are near a Point of Interest (POI).

For example, your TomTom can tell you when there is a petrol station nearby.

To find out about POIs and about setting warnings for POIs, see **Points of Interest** on page 27.

Set clock



Set clock

Tap this button to set the time and to change the way the time is displayed.

The easiest way to set the time is by tapping the **Sync** button. Your TomTom will then take the time from the GPS information it receives.

For more information about GPS, see **How does navigation work?** on page 57.

Note: After using **Sync** to set the time, you may have to adjust the hours depending on your time zone. Your TomTom works out your time zone and always keeps the time correct using the GPS information.

You can only use **Sync** if you have GPS reception, so you cannot set the clock in this way when you are indoors.

Switch map



Switch map

Tap this button to change the map you are using.

When do I need to switch map?

You have to tell your TomTom which map you want to use. If there is more than one map on the memory card in your TomTom, you can switch to another map.

Note: When you switch to another map, you may need to activate that map.

Keyboard preferences



Keyboard preferences

Tap this button to select the size of the keys on the keyboard and the keyboard layout. You can select from two sizes:

- **Large keyboard**
- **Small keyboard**

Three keyboard layouts are available:

- **ABCD keyboard**
- **QWERTY keyboard**
- **AZERTY keyboard**

You use the keyboard to enter your destination or to find items in a list, like POIs.

Note: *The keyboard does not include accents of any kind for any language as you don't have to enter letters with accents. Simply type the letter without the accent and your TomTom will recognise it.*

Manage maps

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Manage maps

Tap this button to do the following:

- **Download a map** - you can buy new maps using TomTom HOME. For more information, see **Using TomTom HOME** on page 55.
- **Switch map** - tap this button to change the map you are using.
- **Delete a map** - tap this button to create more space on your TomTom by deleting a map.

Don't delete a map unless you have already made a backup of the map. If you delete a map before you make a backup, you won't be able to put the map back on your TomTom.

For more information about making a backup, see **Using TomTom HOME** on page 55.

You can also download, add and delete maps using TomTom HOME.

Manage POIs

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Manage POIs

Tap this button to do the following:

- Set alerts for when you are near POIs.

For example, your TomTom can tell you when there is a petrol station nearby.

- Create your own POI categories and add POIs to them.

For example, you could create a category of POIs called "Friends", and add all your friends' addresses as POIs in the category. You can even add your friends' phone numbers with their address so you can call them from your TomTom.

For more information about POIs, see **Points of Interest** on page 27.

Status bar preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Status bar preferences

Tap this button to select the information shown on the status bar:

- Remaining time - the estimated time left until you reach your destination.
- Remaining distance - the distance left until you reach your destination.
- Arrival time - your estimated arrival time.
- Current time
- Street name - the name of the next street to turn on to.
- Speed - your speed.

If the speed limit for road you are on is available, it is shown next to your speed. If you drive faster than the speed limit, your speed is shown in red.

When you first start your TomTom, the remaining time, remaining distance, arrival time and the street name are shown.

Docking preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Docking preferences

Tap this button to select whether the night view is linked to the dimmer setting on your car stereo. For more information, see **Use night colours / Use day colours** on page 38.

Change map colours

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Change map colours

Tap this button to select the colour schemes used for day and night map colours.

You can also download more colour schemes from TomTom PLUS. For more information, see the TomTom PLUS leaflet included with your product.

Brightness preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Brightness preferences

Tap this button to set the brightness of the screen. You can set the brightness separately for day map colours and for night map colours.

You can set the map colour scheme by tapping **Change map colours**. For more information, see **Change map colours** on page 44.

Planning preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Planning preferences

Tap this button to set the kind of route planned when you select a destination. The following options are available:

- **Ask me every time I plan**
- **Always plan fastest routes**
- **Always plan shortest routes**
- **Always avoid motorways**
- **Always plan walking routes**
- **Always plan bicycle routes**
- **Always plan for limited speed**

Toll road preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Toll road preferences

Tap this button to set how your TomTom handles toll roads if they are on the route to a destination you set.

You can choose always to avoid toll roads, never to avoid toll roads or to be asked what to do if a toll road is on the route planned.

If you set that your TomTom should ask you when there is a toll road on the route, you are asked whether you want to avoid the toll road as soon as you plan the route.

Compass preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Compass preferences

Tap this button to select whether a compass is shown and what the compass shows. The following options are available:

- **One with arrow pointing north** - the arrow always points north and the direction you are moving is at the top of the compass.
- **One with arrow showing your heading** - the arrow always shows the direction you are moving and the top of the compass is north.

If you select one of these options, you then choose what is shown in the middle of the arrow:

- **Direction** - the direction in which you are driving is shown in the centre of the compass, as a compass direction.
- **Degrees** - the direction in which you are driving is shown in the centre of the compass, in degrees.
- **Nothing**
- **One with arrow pointing to your destination** - the arrow always points to your destination relative to the direction you are travelling. The distance to your destination is shown in the middle of the arrow.
- **None** - no compass will be shown.

Set units

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Set units

Tap this button to set the units used for the following:

- Distances
- Time
- Latitudes and longitudes
- Temperature
- Air pressure

Operate left-handed / Operate right handed

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Operate left-handed

Tap this button to move important buttons, for example, the **Done** and **Cancel** buttons as well as the zoom bar, to the left hand side of the screen. This makes it easier to tap the buttons with your left hand without blocking the screen.

To move the buttons back to the right hand side of the screen, tap **Operate right-handed**.

Name preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Name preferences

Tap this button to set what is shown on the map in the Driving View. The following options are available:

- **Show house numbers before street names**
- **Show street names**
- **Show next motorway / signpost** - when this option is selected, the next major road on your route is shown at the top of the screen in the Driving View.

Hide tips / Show tips

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Hide tips

Tap this button to stop your TomTom from giving you tips from time to time.

After you hide the tips, the button changes to **Show tips**. Tap this button to turn tips on again.

Set owner

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Set owner

Tap this button to enter your name and address as the owner of your TomTom and to change or delete a 4-digit password for your TomTom.

You can create a 4-digit password for your TomTom using TomTom HOME:

1. Connect your TomTom to your computer and switch it on.
TomTom HOME starts automatically. For information about installing TomTom HOME on your computer, see **Installing TomTom HOME** on page 55.
2. From the Options menu in TomTom HOME, click My TomTom.
3. Click the ON/OFF button on the picture of your TomTom to start the application on your computer.
4. From the Main Menu, click **Change preferences**.
5. Click **Set Owner**. You can now set a 4-digit password for your TomTom so that only you can use it.

You can only create a 4-digit password using TomTom HOME.

You can only change or delete a 4-digit password on your TomTom.

Turn screen upside down

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



**Turn screen
upside down**

Tap this button to turn the display on the screen upside down.

Configure GPS

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Show GPS status

Tap this button for information about the strength of the GPS reception, your GPS position and other GPS information.

Edit TomTom PLUS account



Edit TomTom PLUS account

Tap this button to log in to your TomTom PLUS account.

If you have more than one TomTom PLUS account or if several people are sharing the same TomTom, you can log in to another TomTom PLUS account.

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.

Start-up preferences



Start-up preferences

Tap this button to set what your TomTom should do when you first switch it on. The following options are available:

- **Continue where I left off** - your TomTom starts as it was when you switched it off.
- **Ask for a destination** - your TomTom starts with **Navigate to...** menu. You can enter a destination immediately.
- **Show the Main Menu** - your TomTom starts with the Main Menu.

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.

Disable Bluetooth / Enable Bluetooth



Disable Bluetooth

Tap this button to disable all Bluetooth functionality on your TomTom. In some places, such as hospitals and aeroplanes, you are required to turn Bluetooth off on all electronic devices.

To turn Bluetooth on again, tap **Enable Bluetooth**.

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.

Disable wireless data / Enable wireless data

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



 
Tap this button to turn off the possibility of receiving wireless data. You will still be connected to your mobile phone via Bluetooth and will still be able to receive and make hands-free calls. You will not be able to receive any data that uses a wireless data connection, such as TomTom Traffic.

To turn wireless data on again, tap **Enable wireless data**.

Do not ask arrival time / Ask arrival time

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.

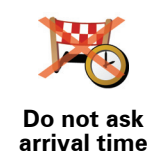

Tap this button to stop your TomTom from asking you if you want to arrive by a particular time whenever you plan a route.

To turn this option on again, tap **Ask arrival time**.

For more information, see **Arrival times** on page 10.

Reset factory settings

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** on page 38.



Tap this button to restore the factory settings to your TomTom. All your settings, including Favourites, your Home location, warnings for POIs and any Itineraries you have created, as well as recent destinations and recent calls and callers, will be deleted.

15. Traffic information

You can get traffic information in two ways:

- From TomTom Traffic
- From the Traffic Message Channel (TMC)

Note: TMC traffic information is not available when using this product outside of Europe.

Receiving traffic information

To receive traffic information, do the following:

1. Tap **TomTom Traffic** in the Main Menu.
2. Tap **Enable Traffic**.



If your TomTom is inserted in your car stereo, it automatically starts to use TMC traffic information. If your TomTom is not inserted in your car stereo, it starts to setup TomTom Traffic.

Whenever your TomTom is inserted in your car stereo, it uses TMC traffic information.

To select to always use TomTom Traffic, instead of TMC, tap **Change Traffic preferences** in the Traffic menu, then select **Use TomTom Traffic instead of RDS-TMC when docked**.

About TomTom Traffic

TomTom Traffic is a TomTom PLUS service that sends up-to-date traffic information to your TomTom. To use TomTom Traffic you must have a mobile phone with Bluetooth and a wireless data connection, for example, GPRS, EDGE, UMTS, CDMA.

TomTom Traffic takes the most up-to-date information from the best local sources.

Note: TomTom Traffic is not available in all countries or areas. Visit www.tomtom.com/plus to check availability in your country.

 
About TMC

The Traffic Message Channel (TMC) is not a TomTom service, but is available in many countries. TMC transmits traffic information as a radio signal.

Note: *TomTom is not responsible for the availability or quality of traffic information provided by TMC. TMC is not available in all countries or regions.*

Using Traffic

When Traffic is enabled the Traffic bar is shown on the right-hand side of the Driving View, as shown below:

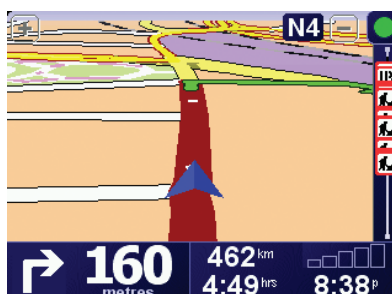

TomTom Traffic will immediately try to retrieve the latest traffic information. TMC traffic information is updated as it is received from the radio station.

Note: *TomTom Traffic retrieves traffic information from TomTom using a wireless data connection on your mobile phone. You must establish a Bluetooth connection between your phone and your TomTom and you must have a wireless data subscription with your mobile network operator.*

For information about connecting to your phone, see **Hands-free calling** on page 35.

Updating traffic information

With TomTom Traffic, there are two ways to update the traffic information:

- Tap **Update traffic info** in the Traffic menu.
- Set Traffic to be updated automatically at regular intervals.

To do this, tap **Change Traffic preferences** in the Traffic menu. Select **Automatically update traffic info while on route**, then tap **Done**.

Using traffic information

Having up-to-date traffic information can help you to reduce your journey time.

Whenever you plan a route, the latest traffic updated you received from TomTom is taken into account by your TomTom when it plans the route.

Your TomTom can also recalculate your route if the traffic situation changes after you start a journey:

1. Tap **Change Traffic preferences** in the Traffic menu.
2. Select **Automatically optimise route after every update**.

After your TomTom gets new traffic information, it will automatically optimise your route.

Note: *The best route may be the same as the route originally planned.*

16. TomTom PLUS

TomTom PLUS is a collection of services that keep you informed and entertained while you're on the road.

You can subscribe to a range of extras and download them either directly to your TomTom, or to your computer from where you can transfer them to your TomTom.

Tips

- New services are being added regularly. Use TomTom HOME or visit www.tomtom.com/plus to find out what's available.
- To download TomTom PLUS services to your TomTom, you need a mobile phone with Bluetooth and a wireless data connection (GPRS, EDGE, UMTS or CDMA). Your mobile operator may charge you for using a wireless data connection.

Don't forget that you can download many TomTom PLUS services to your computer without needing to set up a wireless data connection.

- Not all services are available in all countries. For more information, visit www.tomtom.com/plus
-



Traffic

Get the fastest and most reliable updates from local sources.



Safety cameras

Be smart and stick to the speed limit.



Maps

Download detailed maps of many cities throughout the world or even whole countries.



Voices

Get instructions from John Cleese and many other funny voices.



Buddies

Instant messaging and navigation meet on your TomTom.



Weather

Get weather forecasts for the next 5 days or check the current weather at your destination.



 
Points of Interest

Find the places you need quickly with the locations of thousands of Points of Interest (POIs).

17. Using TomTom HOME

Using TomTom HOME, you can, for example, do the following:

- Make and restore backups of your TomTom.
- Manage the maps, voices, POIs and other extras on your TomTom.
- Read the full version of the user manual.
- Plan journeys in advance.
- Buy TomTom PLUS services and manage your subscriptions.

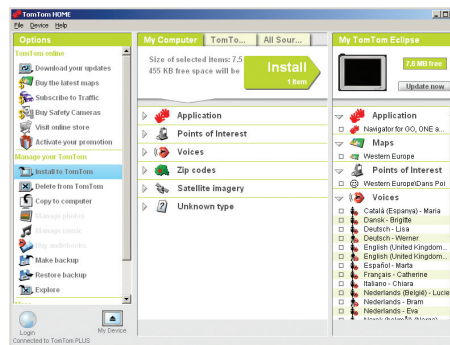

Installing TomTom HOME

To install TomTom HOME, put the CD which came with your TomTom into your computer.

If the installation does not start, browse to the CD on your computer and double-click the file **Install TomTom HOME**.

Connect your TomTom to your computer and switch it on.

Making a backup

 
One of the most important things you can do with TomTom HOME is make a backup of your TomTom.

1. Connect your TomTom to your computer using the USB cable and switch your TomTom on.

TomTom HOME starts.

2. Click **Backup** under **Contents**.
3. Click **Backup**.

TomTom HOME makes a backup of your TomTom on your computer.

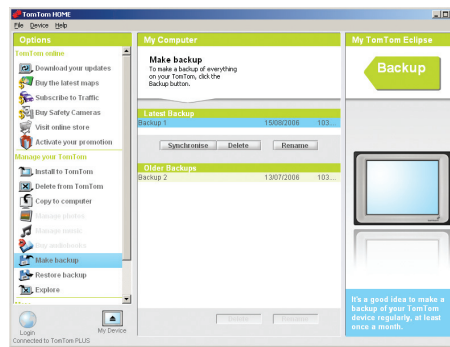

Restoring a backup

If you ever have a problem with your TomTom, you can restore the backup.

Follow steps 1 and 2 above, then select the latest backup and click **Restore**.

The latest backup will be restored to your TomTom.

For more information, see the Help included with TomTom HOME.

18. How does navigation work?

Global Positioning System (GPS)

In order to navigate you to your destination, your TomTom must know where you are now. To find your current position, your TomTom uses the Global Positioning System (GPS). GPS is available for free and without subscription.

The GPS uses satellites to transmit signals to GPS receivers. Your TomTom uses a GPS receiver built into your car when inserted in your car stereo, and it has a built-in GPS receiver that it uses when it is not inserted in the car stereo. Using the GPS signal, your TomTom can work out where you are and how fast you are going. GPS signals work in all weather, anywhere in the world.

Note: Your TomTom does not transmit your position, so others cannot use it to track you while you are driving. You can however send your position to TomTom Buddies. For more information, visit www.tomtom.com/plus

Maps

Once your TomTom knows where you are and you have told it where you want to go, it uses the digital map on the memory card to work out the best route to your destination.



19. Addendum

Important Safety Notices and Warnings

Global Positioning System

The Global Positioning System (GPS) is a satellite-based system that provides location and timing information around the globe. GPS is operated and controlled under the sole responsibility of the Government of the United States of America which is responsible for its availability and accuracy. Any changes in GPS availability and accuracy, or in environmental conditions, may impact the operation of your TomTom. TomTom does not accept any liability for the availability and accuracy of GPS.

Use with Care

Use of TomTom for navigation still means that you need to drive with due care and attention.

Aircraft and Hospitals

Use of devices with an antenna is prohibited on most aircraft, in many hospitals and in many other locations. TomTom must not be used in these environments.

Battery

This product uses a Lithium-Ion battery. Do not use it in a humid, wet and/or corrosive environment. Do not put, store or leave your product in or near a heat source, in a high temperature location, in strong direct sunlight, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 60 C (140 F). Failure to follow these guidelines may cause the Lithium-Ion battery to leak acid, become hot, explode or ignite and cause injury and/or damage. Do not pierce, open or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at low (below 0 C/32 F) or high (over 45 C/113 F) temperatures.

Temperatures: Standard operation: -10 C (14 F) to +55 C (131 F); short period storage: -20 C (-4 F) to + 60 C (140 F); long period storage: -20 C (-4 F) to +25 C (77 F).



THE LITHIUM-ION BATTERY CONTAINED IN THE PRODUCT MUST BE RECYCLED OR DISPOSED OF PROPERLY. USE YOUR TOMTOM ONLY WITH THE SUPPLIED DC POWER LEAD (CAR CHARGER/ BATTERY CABLE) AND AC ADAPTER (HOME CHARGER) FOR BATTERY CHARGING.

To recycle your TomTom unit please see your local approved TomTom service center.

FCC Information for the User

This product contains a transmitter which must not be co-located or simultaneously operated in conjunction with any other transmitter.

Exposure to Radio Frequency Radiation

To comply with RF exposure requirements please maintain a separation distance of at least 20 cm / 7 inches from any part of the product.

Radio and Television Interference

This equipment radiates radio frequency energy and if not used properly - that is, in strict accordance with the instructions in this manual - may cause interference to radio communications and television reception.

It has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation distance between the equipment and the receiver.
- If you are using the equipment with a mains adapter, plug it into an outlet which is on a different circuit from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

Important

This equipment was tested for FCC compliance under conditions that included the use of shielded cables and connectors between it and the peripherals. It is important that you use shielded cable and connectors to reduce the possibility of causing radio and television interference. Shielded cables, suitable for the product range, can be obtained from an authorised dealer. If the user modifies the equipment or its peripherals in any way, and these modifications are not approved by TomTom, the FCC may withdraw the user's right to operate the equipment. For customers in the USA, the following booklet prepared by the Federal Communications Commission may be of help: "How to Identify and Resolve Radio-TV Interference Problems". This booklet is available from the US Government Printing Office, Washington, DC 20402. Stock No 004-000-00345-4.

FCC Declaration of Conformity

Tested to Comply with FCC Standards for Home or Office Use

TomTom has been tested to – and complies with – part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Responsible party in North America

TomTom, Inc., 150 Baker Avenue, Concord, MA 01742

Tel: 866 48-6866 option 1 (1-866-4-TOMTOM)

Emissions information for Canada

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CE Marking



This equipment complies with the requirements for CE marking when used in a residential, commercial, vehicular or light industrial environment.

R&TTE Directive

This equipment complies with the essential requirements of EU Directive 99/5/EC.

Diese Ausrüstung erfüllt die wesentlichen Anforderungen der EU-Richtlinie 99/5/EC.

Cet équipement remplit les conditions édictées dans la Directive EC/99/5.

Deze apparatuur is conform de eisen van de EU-richtlijnen 99/5/EC.

Questa apparecchiatura soddisfa le condizioni essenziali della Direttiva Europea 99/5/EC.

Este equipo cumple con los requisitos esenciales de la Directiva 99/5/EC de la EU.

Dette udstyr overholder de grundlæggende krav i EU-direktiv 99/5/EC.

Denna utrustning rättar sig efter de nödvändiga krav från EU direktiv 99/5/EC.

Tämä laite täyttää oleellisilta osin EU:n direktiivin 99/5/EY vaatimukset.

Este equipamento está em conformidade com os requisitos essenciais da Directiva da UE 99/5/CE.

TomTom tímto prohlašuje, že TomTom je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1995/5/ES (NV č. 426/2000 Sb.) a Prohlášení o shodě je k dispozici na www.tomtom.com. Toto zařízení lze provozovat v České republice na základě generální licence č. GL - 12/R/2000.

Seadmed vastavad EL direktiivi 99/5/EÜ põhinõuetele.

A jelen berendezés megfelel az EU 99/5/EC direktívája meghatározta szükséges előírásoknak.

Ši įranga atitinka visus ES direktyvos 99/5/EB reikalavimus.

Šis produkts atbilst visām ES noteiktajām Direktīvām 99/5/EC.

Sprzęt ten jest zgodny z podstawowymi wymaganiami Dyrektywy UE 99/5/EC.

TomTom týmto vyhlasuje, že TomTom spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1995/5/ES (NV č.443/2001 Z.z.) a Vyhlásenie o zhode je k dispozícii na www.tomtom.com. Toto zariadenie je možné prevádzkovať v Slovenskej republike na základe Všeobecného povolenia č. VPR-01/2001.

Bu cihaz AB Direktifi 99/5/AT'nin zorunlu gerekliliklerine uygundur.

WEEE Directive



In line with EU Directive 2002/96/EC for waste electrical and electronic equipment (WEEE), this electrical product must not be disposed of as unsorted municipal waste. Please dispose of this product by returning it to the point of sale or to your local municipal collection point for recycling.

In Übereinstimmung mit der Richtlinie 2002/96/EG des Europäischen Parlaments und des Rates über Elektro- und Elektronik-Altgeräte (WEEE) darf dieses Elektrogerät nicht im normalen Hausmüll oder dem Gelben Sack entsorgt werden. Wenn Sie dieses Produkt entsorgen möchten, bringen Sie es bitte zur Verkaufsstelle zurück oder zum Recycling-Sammelpunkt Ihrer Gemeinde.

Conformément à la Directive 2002/96/EC sur les déchets d'équipements électriques et électroniques (DEEE), ce produit électrique ne doit en aucun cas être mis au rebut sous forme de déchet municipal non trié. Veuillez vous débarrasser de ce produit en le renvoyant à son point de vente ou au point de ramassage local dans votre municipalité, à des fins de recyclage.

In navolging van richtlijn 2002/96/EG van het Europees Parlement en de Raad betreffende afgedankte elektrische en elektronische apparatuur (AEEA) mag dit elektrische product niet als ongescheiden huisvuil worden weggedaan. Breng dit product terug naar de plaats van aankoop of naar het gemeentelijke afvalinzamelingspunt voor recycling.

In ottemperanza alla Direttiva UE 2002/96/EC sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE), questo prodotto elettrico non deve essere smaltito come rifiuto municipale misto. Si prega di smaltire il prodotto riportandolo al punto vendita o al punto di raccolta municipale locale per un opportuno riciclaggio.

De conformidad con la Directiva 2002/96/CE de la UE sobre residuos de aparatos eléctricos y electrónicos (RAEE), este producto eléctrico no puede desecharse con el resto de residuos no clasificados. Deshágase de este producto devolviéndolo al punto de venta o a un punto de recogida municipal para su reciclaje.

I henhold til EU-direktiv 2002/96/EF om affald af elektrisk og elektronisk udstyr (WEEE) må dette udstyr ikke bortskaffes som usorteret husholdningsaffald. Bortskaf dette produkt ved at returnere det til salgsstedet eller til det lokale indsamlingssted, så det kan genbruges.

I linje med EU-direktiv 2002/96/EG om avfall som utgörs av eller innehåller elektriska eller elektroniska produkter (WEEE) får denna elektriska produkt inte bortskaffas som osorterat kommunalt avfall. Bortskaffa den i stället genom att lämna in den på försäljningsstället eller din lokala återvinningsstation.

EU:n sähkö- ja elektroniikkalaiteromudirektiivin (2002/96/EY) mukaisesti tätä elektroniikkalaitetta ei saa laittaa lajittelemattoman yhdyskuntajätteen sekaan. Hävitä laite palauttamalla se ostopaikkaan tai viemällä se elektroniikkaromun keräyspisteeseen.

De acordo com a Directiva Europeia 2002/96/EC sobre resíduos sólidos de equipamento eléctrico e electrónico (WEEE), este produto eléctrico não pode ser deixado fora juntamente com o lixo municipal indiferenciado. Por favor, no final da vida útil deste produto, devolva-o ao estabelecimento de aquisição, ou entregue-o no local de recolha apropriado para reciclagem designado pelo seu município.

V souladu se směrnicí EU č. 2002/96/ES o odpadních elektrických a elektronických zařízeních (OEEZ) se tento elektrický výrobek nesmí likvidovat jako netříděný komunální odpad. Při likvidaci tento výrobek vraťte prodejci nebo ho odevzdejte k recyklaci do komunálního sběrného zařízení.

Vastavalt EL direktiivile 2002/96/EÜ, mis käsitleb elektri- ja elektroonikaseadmete jäätmeid (WEEE), ei või antud toodet visata majapidamisjäätmete hulka. Palun tagastage antud toode taaskasutamise eesmärgil müügipunkti või kohaliku piirkonna jäätmekogumise punkti.

Az elektromos és elektronikus berendezések hulladékairól szóló 2002/96/EK (WEEE) irányelvnek megfelelően ezt az elektromos berendezést tilos szortírozatlan, közösségi hulladékgyűjtőbe dobni. A terméket használatra befejeztével vigye vissza az eladási ponthoz vagy a helyi közigazgatási újrahasznosító gyűjtőhelyre.

Pagal ES Direktīvą 2002/96/EB dėl elektros ir elektroninės įrangos atliekų (WEEE), šio elektros gaminio negalima išmesti su buitinėmis atliekomis. Šį gaminį reikia grąžinti į tą vietą, kur jis buvo pirktas, arba į miesto atliekų perdėbimo punktą.

Saskaņā ar ES Direktīvu 2002/96/EC par elektrisko un elektronisko iekārtu atkritumiem (EEIA), šo elektrisko iekārtu ir aizliegts nodot kopā ar citiem nešķirotiem sadzīves atkritumiem. Lūdzu nododiet šo iekārtu atpakaļ tās tirdzniecības vietā vai Jūsu tuvākajā sabiedriskajā iekārtu savākšanas punktā to pārstrādei.

Zgodnie z Dyrektywą Nr 2002/96/WE w sprawie zużytego sprzętu elektrycznego i elektronicznego (WEEE), niniejszego produktu elektrycznego nie wolno usuwać jako nie posortowanego odpadu komunalnego. Prosimy o usunięcie niniejszego produktu poprzez jego zwrot do punktu zakupu lub oddanie do miejscowego komunalnego punktu zbiórki odpadów przeznaczonych do recyklingu.

V súlade so smernicou 2002/96/ES o odpade z elektrických a elektronických zariadení (OEEZ) sa toto elektrické zariadenie nesmie odstraňovať ako netriedený komunálny odpad. Výrobok odstráňte jeho vrátením v mieste nákupu alebo odovzdaním v miestnom zbernom zariadení na recyklovanie.

Atık elektrikli ve elektronik cihazlar konulu 2002/96/AT sayılı AB Direktifine (WEEE) uygun olarak bu cihaz, ayrılmamış belediye atıklarıyla birlikte atılmamalıdır. Lütfen bu ürünü, satış noktasına iade ederek veya belediyenizin geri dönüşüm için toplama merkezine götürerek atın.

Ctick



N14644

This product displays the Ctick to show it complies with all relevant Australian and New Zealand regulations.

This Document

Great care was taken in preparing this manual. Constant product development may mean that some information is not entirely up-to-date. The information in this document is subject to change without notice.

TomTom shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the performance or use of this material. This document contains information protected by copyright. No part of this document may be photocopied or reproduced in any form without prior written consent from TomTom International B.V.

Part numbers

TomTom device: 4P00.004

20. Copyright notices

© 2007 TomTom International B.V., The Netherlands.

Patents Pending. All rights reserved.

TomTom and the TomTom logo are registered trademarks of TomTom International B.V., The Netherlands. All other trademarks are the property of their respective owners.

*Our end user license agreement and a limited warranty apply to this product; they are included in this package. You can also review both at **www.tomtom.com/legal***

Data Source

© 2007 Tele Atlas N.V. Based upon:

Topografische ondergrond Copyright © dienst voor het kadaster en de openbare registers, Apeldoorn 2007.

© Ordnance Survey of Northern Ireland.

© IGN France.

© Swisstopo.

© BEV, GZ 1368/2007.

© Geonext/DeAgostini.

© Norwegian Mapping Authority, Public Roads Administration /

© Mapsolutions. © DAV.

This product includes mapping data licensed from Ordnance Survey with the permission of the Controller of Her Majesty's Stationery Office. © Crown copyright and/or database right 2007. All rights reserved. Licence number 100026920.

Apple® and iPod® are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

SoundClear™ acoustic echo cancellation software © Acoustic Technologies Inc.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

*Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit **mp3licensing.com***

Some images are taken from NASA's Earth Observatory.

The purpose of NASA's Earth Observatory is to provide a freely-accessible publication on the Internet where the public can obtain new satellite imagery and scientific information about our home planet.

*The focus is on Earth's climate and environmental change:
earthobservatory.nasa.gov/*
